Entertainment

Icon	Explanation
	(When selected during playback) Pauses the track.

Album art displayed during USB audio playback

When connecting a USB audio device to this unit and playing audio, the unit searches the database stored in the vehicle for the album art. If there is a match in the vehicle's database compilation to the music being played, the album art is displayed. The database information stored in this device uses database information in the Gracenote® music recognitions service.

NOTE

- Automatically added information may differ from the actual information.
- · Album art may not be displayed depending on how the music data is read.

Album art display priority

You can change the album art display priority to either the album art saved in the USB audio device or the Gracenote[®] database.

Refer to System Settings on page 7-27.

Updating the database

The Gracenote® database can be updated using a USB Audio device. Select "Gracenote Database Update" from the System Settings screen. Refer to System Settings on page 7-27.